



Computer Security Products Inc.

Universal Contact Module (PCT-UCM).

When using the PCTab system on a panel other than our DSC alarm panel, you must use this Universal Contact Module to ensure proper operation. The Universal Contact Module makes the PCTab fully compatible with any alarm panel. It monitors the PCTab sensors and wires with a fully supervised loop while providing a dry contact to your panel.

Place the Module inside your alarm panel and connect the wires from the Module as follows:

Red	12 VDC +
Black	12 VDC –
Green	Zone Common
Yellow	N/O Zone
Blue	N/C Zone

Connect the incoming zone wire from the PCTab sensors into the screw-down terminal with the zone wire on the terminal marked Z, and the common wire on the terminal marked C. If you are using an RJ-11 jack with the PCTab RJ-11 adapter at the protected equipment, the zone wire is the red terminal on the jack and the common is the green terminal.

After installation, confirm correct polarity by opening the sticker cover on a PCTab sensor. If the sensor LED does not light, you have the polarity incorrect and the wires must be reversed.

If you are adding this module into an existing PCTab installation, you must use a standard (black) terminator with the Universal Module. Check the end of the PCTab string for any other color terminator and replace if necessary.

If you have any questions, please contact technical support at 800-466-7636.