

### INSTALLING THE LOCK

## UNLOCKING THE LOCK



COMPUTER AND LAPTOP LOCKS

Determine which of the three interchangeable lock heads fits the lock slot on your computer.

UNIVERSAL SOLUTIONS Three interchangeable lock heads





WEDGE



2.5 - 6mm

NANO

SLOT



**STANDARD** 



Insert the lock head that fits the lock slot on your computer into the lock body.

If you purchased a specific sized kit, the

 






Anchor the cable to an immovable object. This could be a desk leg or data hole. If no natural anchor point is available, you can use an external fastener.

the lock button.





To unlock, turn the key to the right to remove the lock from your computer.

Have questions? Need a different lock style? Need any of the lock styles in bulk? Give us a call at (800) 466-7636 or send us an email to: help@computersecurity.com

# TROUBLESHOOTING, QUESTIONS & ANSWERS

end of the lock body when it is seated correctly.

Ensure the lock is unlocked and the lock button is not depressed before inserting the lock head into the lock body. If the lock button is depressed (even partially) on the lock body, you will not be able to fully insert the lock head.

You may be using the wrong lock head. Check your device settings for security slot

Make sure the lock is pressed all the way into the security slot before depressing the

The lock head has not been inserted completely. The lock head should sit flush with the

CSP-UL-870k - T-Lock kit. includes only the T-lock lockhead

FIND THE KIT THAT'S RIGHT FOR YOU:

CSP-UL-3K - Universal kit.

includes all 3 lockheads

CSP-UL-871K - Wedge lock kit,



DO YOU HAVE OTHER COMPUTER SECURITY NEEDS? Glue-on

Privacy Monitors



File Cabinet Locks







100 Factory Street Nashua, NH 03060 Phone: (800) 466-7636 or (603) 889-9899

FAX: (800) 615-1954 or (603) 889-9822 help@computersecurity.com

www.computersecurity.com

includes only the wedge lockhead CSP-UL-872K - Nano lock kit.

includes only the nano lockhead

it is hard to press the lock button. How do I remove the lock head?

When inserting the lock into your device,

When changing lock heads, the new lock head

When pressing the lock button, the lock head

won't go all the way into the lock body.

gets pushed out of the lock body.

lock button. With the lock unlocked, pull the lock head straight out of the lock body.

information.

All the above kits can be keyed under the same master key series

What if there isn't a natural anchoring point? (This is a semi-permanent option and should only be used with permission)

Visit our website at: www.ComputerSecurity.com or call us at (800) 466-7636

A glue on external fastener can be attached to a desk to use as an anchor.

2 keys are included.

How many keys are included?

6.5 ft. How long is the cable?