CSP-WL120C
Installation Instructions

5 Star North, LLC
dba Computer Security Products

Setting Your Combination

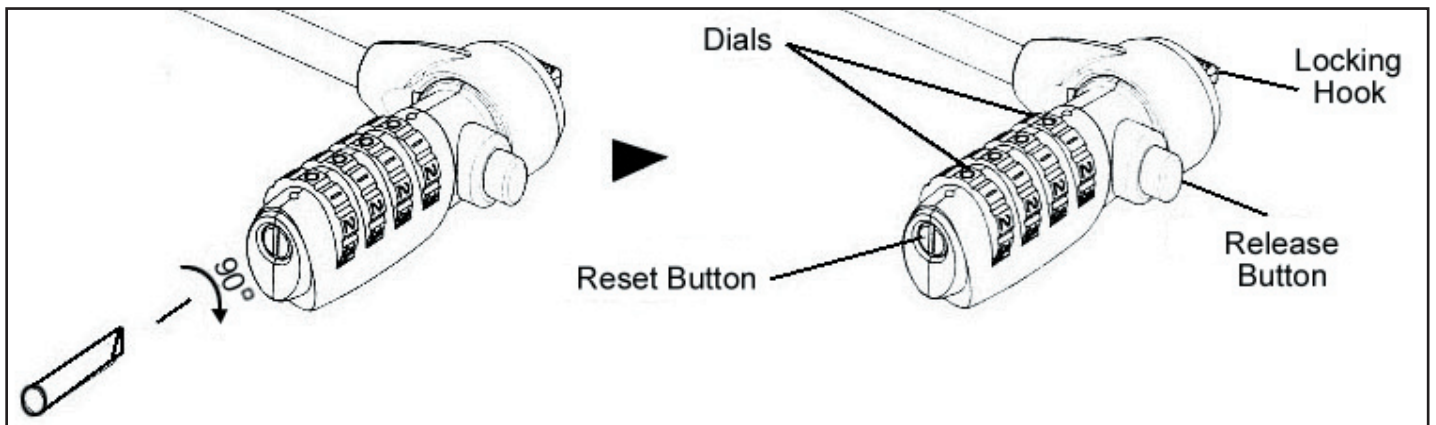1.Turn the dials to the opening number 0-0-0-0.
2.Turn the reset button 90° clockwise with a small flathead screwdriver or similar object.
3.Turn the dials to your own desired combination.
CAUTION: When returning the reset button to the vertical position, be careful not to turn any of the dials, as this will cause your code to be changed.
4.Turn the reset button 90° counterslockwise back to its original position.
NOTE: Please ensure the reset button has returned to the vertical position (in line with the case seam) and has popped back out.

Your lock is now ready to be opened with its new secret combination.

Securing Your Laptop

1.Wrap the cable around an immovable object (i.e. desk leg) or thread through a glue-on fastener.
2.Turn the dials to the correct combination.
3.Press and hold the release button, then insert the locking hook into the locking slot of your laptop.
4.Release the button and scramble the dials.

www.ComputerSecurity.com

100 Factory Street, Nashua, NH 03060 - (603) 889-9899 - CustomerService@ComputerSecurity.com