



# Computer Security Products, Inc.



## Qualtec® 11002 Installation Instructions

These instructions to be used when using the Industrial Adhesive only.

### Anchoring Method: Peel and Stick Industrial Adhesive Only

(This method allows the STEEL-LOK to be removed from the work surface.)

1. Disconnect all electrical power to your equipment.
2. Turn over the piece of equipment to be secured, exposing the underside. Determine proper placement of rubber discs on equipment. Be sure to place on a flat solid surface of the equipment. Do not block any ventilation holes. Positioning should occur with the rubber discs locked into place in the metal encasements. After determining the proper position, draw a pencil outline around the discs.
3. Rub both the mounting area and the discs with the green scrub pad provided, dust off these surfaces and wipe with the alcohol pad provided. Let surfaces dry fully for 5 minutes. Dust again with a clean dry cloth.
4. Leaving the rubber discs locked in the metal encasements, apply 10 drops of the "Super Bond" adhesive. **CAUTION: This glue dries quickly and will bond to any surface. Avoid contact with skin and eyes.**
5. With the discs still locked into the metal encasements, turn the equipment right side up and position on the work surface where it is to be secured. With the pencil, mark a target area around each of the encasements. Set equipment aside and clean the marked target areas with the scrub alcohol wipes as instructed above.
6. Tilt the equipment back and remove the paper backing from the adhesive on the bottom of the encasements. Do not touch the exposed adhesive layer. Position the encasements over the target area and set the equipment down within the penciled areas (bonding is immediate however full strength is not achieved for 72 hours). Unlock the equipment from the encasements by rotating the key fully. Lift the equipment off the encasements and press the encasements firmly into place.

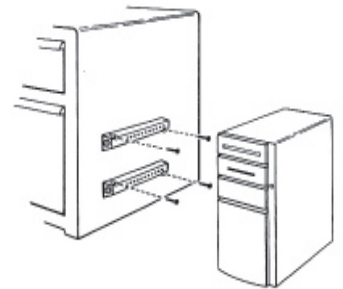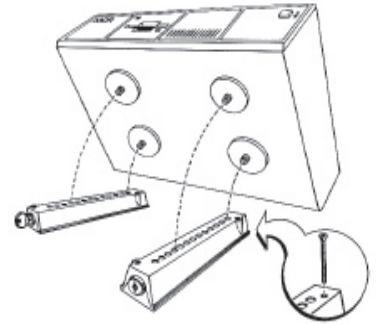

### Anchoring Method: Bolts or Screws, Ideal for Side Mounting

(This method does not allow STEEL-LOK to be removed from the work surface)

Follow instructions 1-5, then proceed with the following instructions:

- 6-B. Follow the prep instructions in step 3 for the vinyl surfaces of STEEL-LOK.
- 7-B. Apply 24 drops of the "Super Bond" liquid adhesive to the prepared surfaces of one of the encasements. Carefully place the glued encasements into the penciled area on the work surface. NOTE: It is very important that you place the encasements very carefully. They can not be removed once they are in place. Repeat for 2nd encasement.
- 8-B. Lower the machine so the metal bits in the rubber adapter feet go into the holes on the top of the encasements.
- 9-B. Turn the key to lock the equipment to STEEL-LOK.

