




## Computer Security Products, Inc.

### Kensington Universal Laptop Kit Installation Instructions


MasterLock and Kensington have joined together to develop the MasterLock Notebook Security Cable. This patented cable uses the unique Kensington security slot built into almost every notebook computer manufactured.



1. Find a suitable docking station

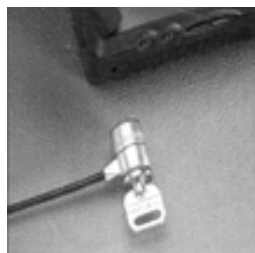

2. Leave key in lock & insert into slot

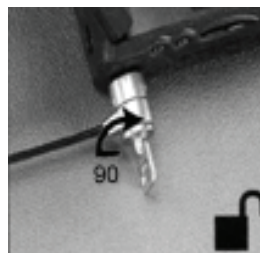

3. Rotate key 90 degrees counter-clockwise



4. Remove key. Your cable is now locked.

#### **Important:**

Be sure to register your key code on-line at [www.Kensington.com](http://www.Kensington.com). Your key code is stamped into the metal face of your key. If you are unable to register on-line, copy the key code and store it in a safe place. You will need this key code if it becomes necessary to order a replacement key.

#### **Free Security Slot Adapter**

If your equipment does not have the built-in Kensington security slot, call Technical Support at 800-535-4242 to request a free adapter kit.